

Pre-Operating Section

2.1 INSTRUMENTS AND CONTROLS:

Ignition Switch:

Used to power the accessories and start the unit.

ACCESSORIES - first position

STARTER ENGAGE - second position (springs return to first position)

Choke:

Used to help start a cold engine. The choke control is in the "on" position when it is pulled out and "off" when it is pushed in.

Throttle:

The throttle is used to increase or decrease the engine speed. Pulling the handle out increases the engine speed and pushing the handle in decreases the engine speed. The throttle can be locked at a desired speed by turning the handle clockwise 1/4 turn.

Oil Pressure Indicator Light:

The light is a warning light that indicates that the engine's oil pressure is below the normal operating oil pressure. When the light is ON, the engine should be stopped immediately and a qualified technician should investigate the cause of the low oil pressure condition. This light will illuminate during startup for a few seconds.

Water Temperature Indicator Light:

The light is a warning light that indicates that the engine's water temperature is above the normal operating temperature. When the light is ON, the engine should be stopped immediately and a qualified technician should investigate the cause of the overheating condition.


Charge Indicator Light:

The light is a warning light that indicates that the alternator is not charging the battery. When the light is ON, the engine should be stopped immediately and a qualified technician should investigate the cause of the alternator not charging.

Hour Meter/Tachometer:

Indicates the accumulated hours of the the engine. This should be used to schedule maintenance. The tachometer shows the engine's speed.

(Typical)

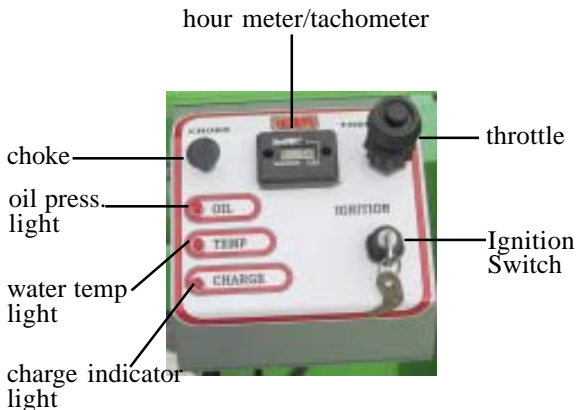

CAUTION

Always make sure the intake hose is connected properly and make sure people and objects are clear of the intake hose.