


Parts Breakdown Section

6-1 Blower Housing Group - 2005

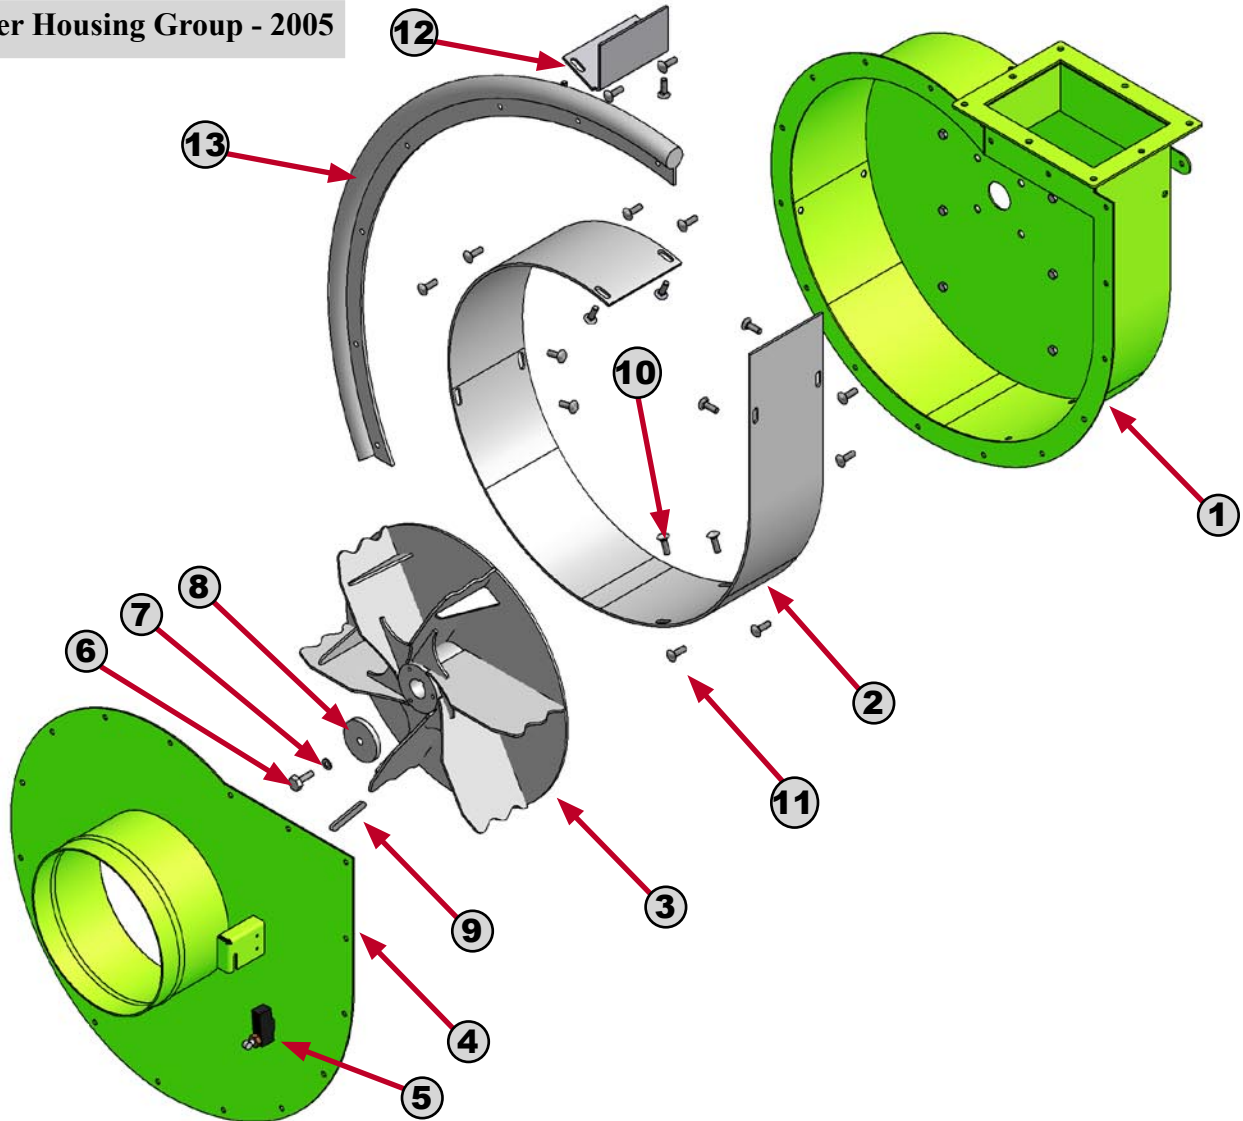

ITEM NO.	PART NUMBER	DESCRIPTION
1	65.1002D	Blower Housing Back
2	65.1002L	Liner
3	65.1004B	Impeller
4	65.1002C	Blower Housing Face Plate
5	65.1606	Limit Switch
6	65.1005C	Impeller Bolt
7	65.1005	Washer
8	65.1004H	Hub
9	65.1005B	Key
10	65.1002L1B	Liner Bolt
11	65.1002L1N	Liner Nut
12	65.1002LC	Neck Liner
13	65.1010	Hose Guard